



Web Master: D. Hebblethwaite

© No articles or photos can be copied without prior consent of the Web Master

## Method to change frequencies to European from USA frequencies


**STEP 1.** Remove these two screws from both sides of the radio.



**STEP 2.** Remove these screws from both handles



**STEP 3.** Remove these 3 screws from both sides of

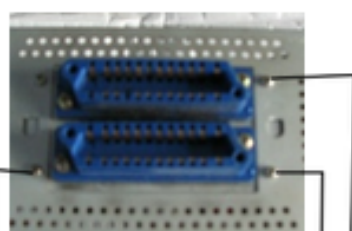

**STEP 4.** Remove the 4 screws & slide the connectors upward until free of lugs.



**STEP 5.** Remove outer cover by sliding it backward.



**STEP 6.** Remove this screw from both sides




**STEP 7.** Remove these two screws on the top cover.




**STEP 8.** Remove top cover



Radio Circuit Board. The area circled is where the modification will take

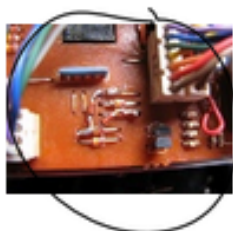

A close up of the area.

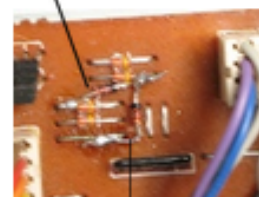

**STEP 9.** These 2 diodes are type 1N4148. They need to be connected as per the photograph. This will change the frequency division from American to European.

**STEP 10.** Re-assemble by following the dismantling procedure in